


Flat Packed Store

instruction manual

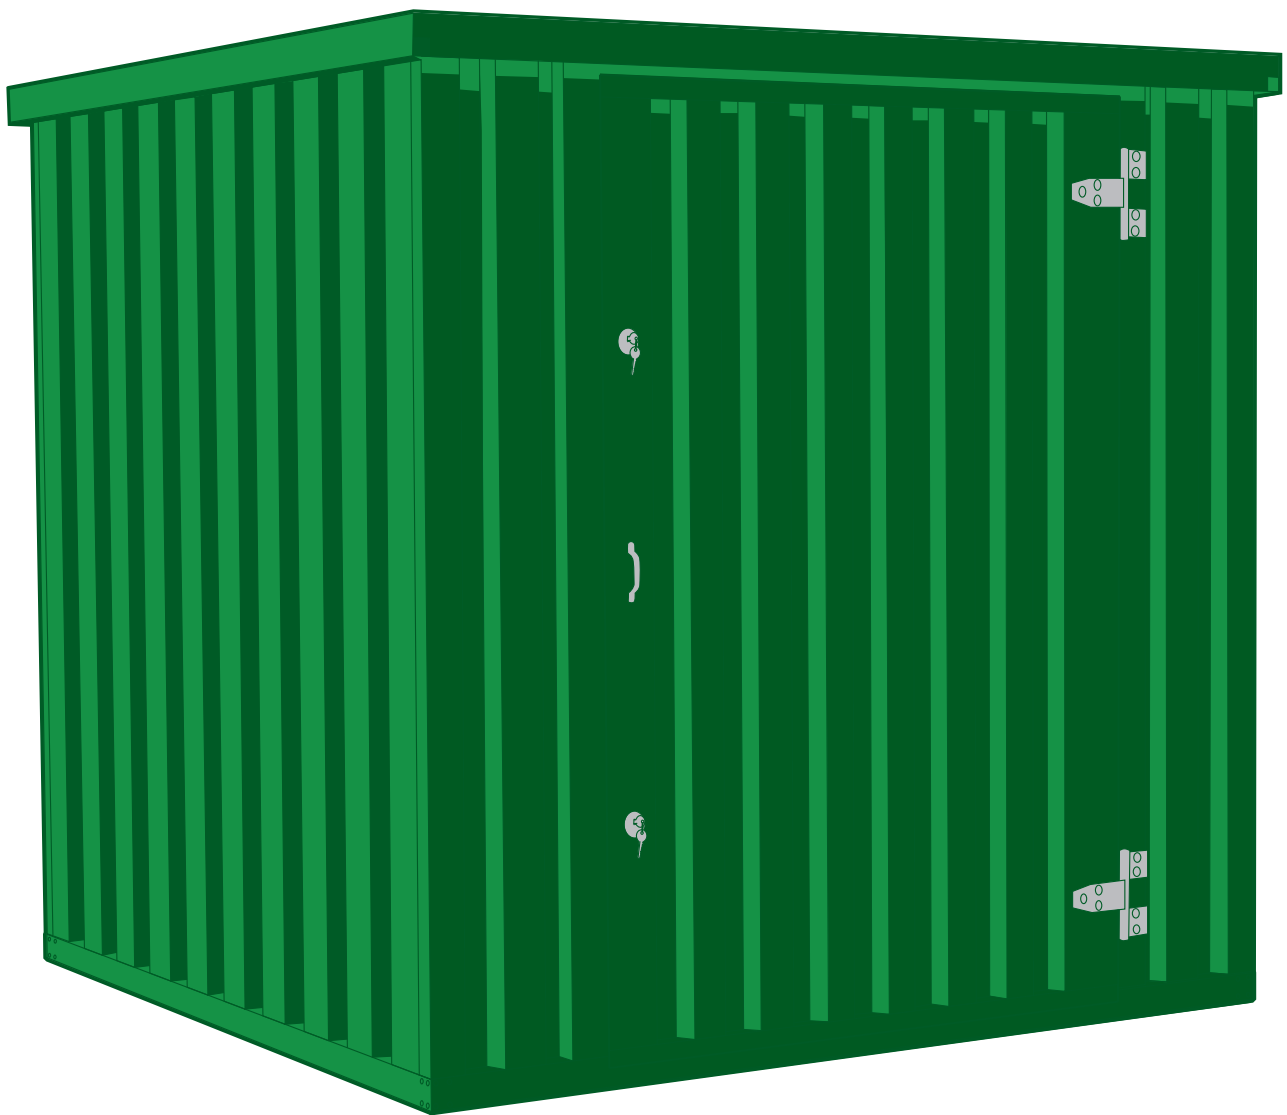

www.extendaline.com

Basic Components


Floor:

Chassis : 1 Pc(s)


Panels:

Wall panels : 3 Pc(s)
Door panel : 1 Pc(s)
Roof panel : 1 Pc(s)

Fixings:

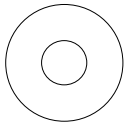

M8 washer:
2m unit : 32 Pc(s)
3m unit : 36 Pc(s)
4m unit : 40 Pc(s)

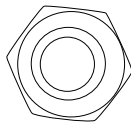

M8 Nut:
2m unit : 8 Pc(s)
3m unit : 8 Pc(s)
4m unit : 8 Pc(s)




M8 x 20mm Bolt:
2m unit : 32 Pc(s)
3m unit : 36 Pc(s)
4m unit : 40 Pc(s)




Key sets:

2 Sets




Cylinders:

2 Pc(s)



55mm cylinder lock
screw
2 Pc(s)



M4 x 50mm Nut & Bolt

2 Sets



Door handle:
2 Pc(s)



Lifting eyes:
4 Pc(s)



M27 washers
4 Pc(s)



Rubber washers
4 Pc(s)



Lighting rods
4 Pc(s)

Store Instructions Manual

Please read all of the information below before you begin assembly.

To assemble your Store, you will need a cross-point screwdriver, 13 mm and 19 mm socket set and a flat screwdriver.

Notes for assembly:


- 1. For the best results, assemble your Store on level ground so as to avoid bending of the chassis and complications with the aligning of the panels.
- 2. On initial assembly, only hand-tighten all nuts and bolts, when assembly is complete tighten all nuts and bolts with your socket spanner.
- 3. Retain all parts if demounting.

Notes after assembly:


- 1. Your Store can be linked end to end and side to side with an additional unit and a linking kit.
- 2. You can return your Store back to it's original flat pack form at any time.
- 3. Store is not designed to be stacked when it is assembled.
- 4. You can lift your Store by crane using a lifting set (optional) with a load of up to 1500 kg distributed load.
- 5. Oil the lock / hinges regularly.

1. Unpacking:



a. Your Store arrives flat-packed.

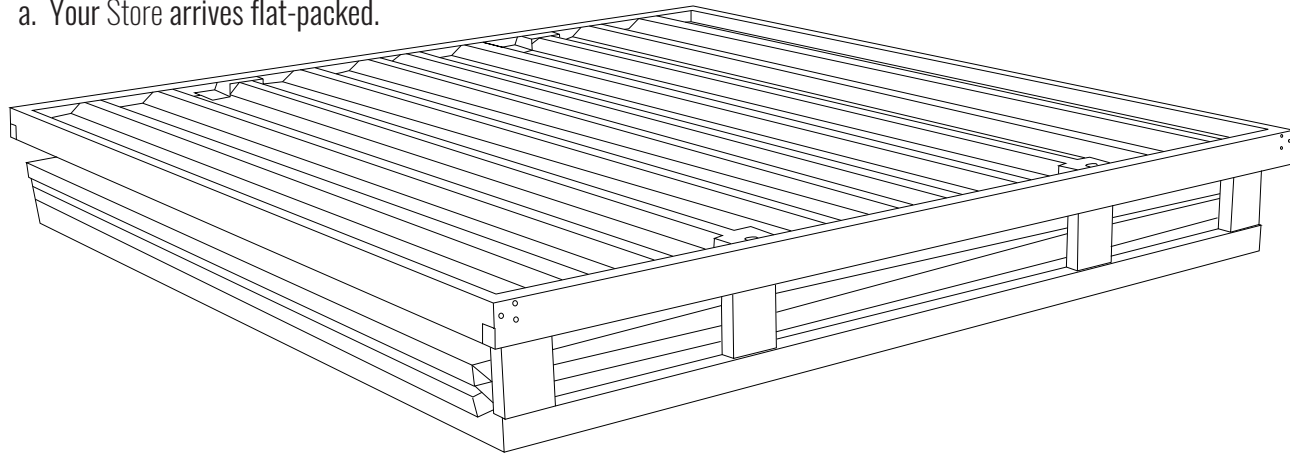


b. Undo and remove the 4 retaining bolts with your 19 mm socket spanner (retain these for future use in case you want to return the Store to its original flat-pack form).

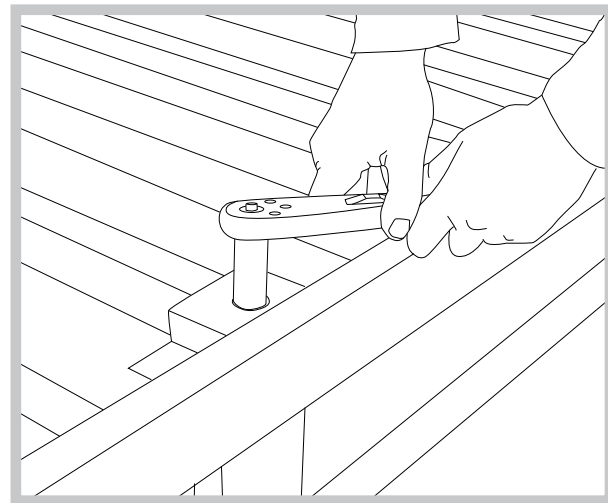


c. Remove the roof panel

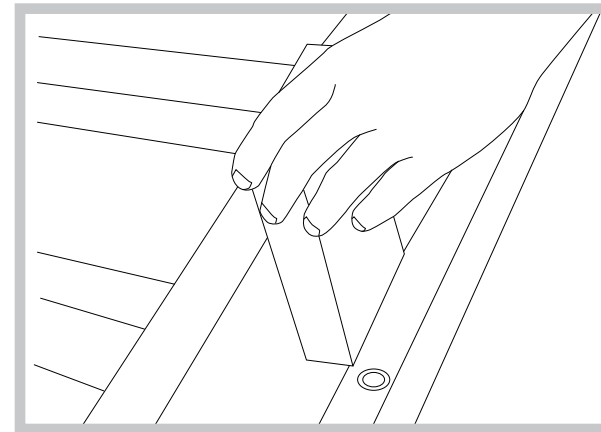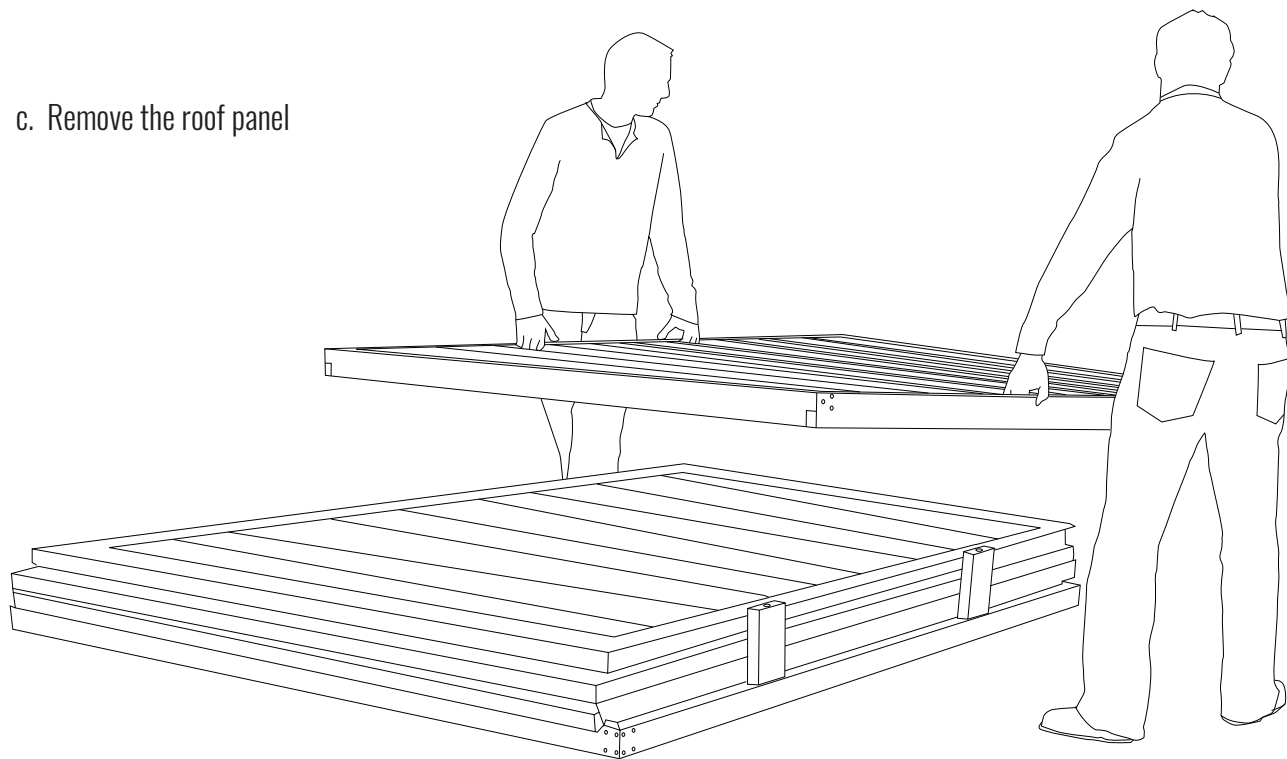

d. Remove spacer protective blocks (retain these for future use in case you want to return the store to its original flat-pack form).

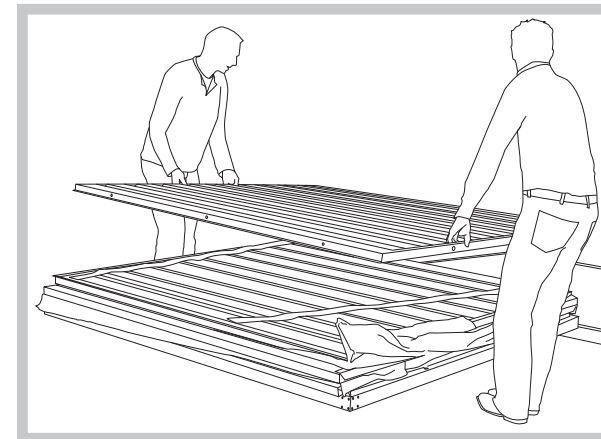


e. Remove all of the panels.

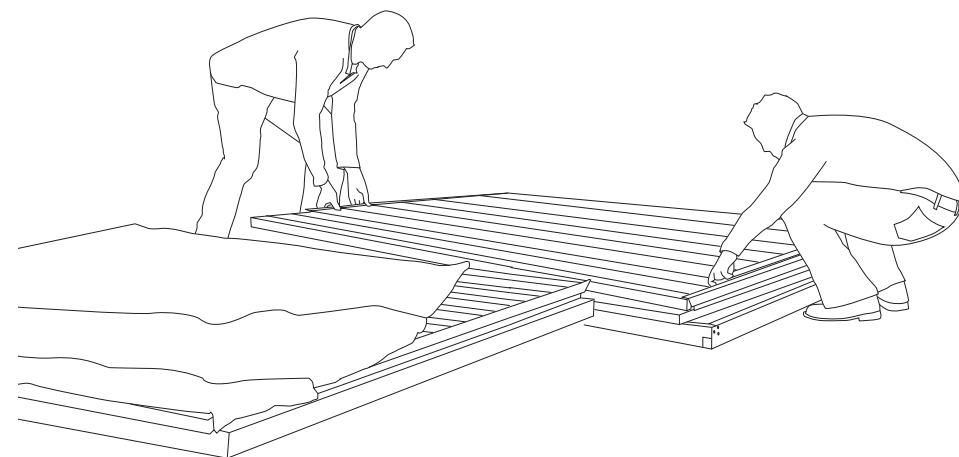


2. Door Placement

a. Position the chassis on level ground and in its final location




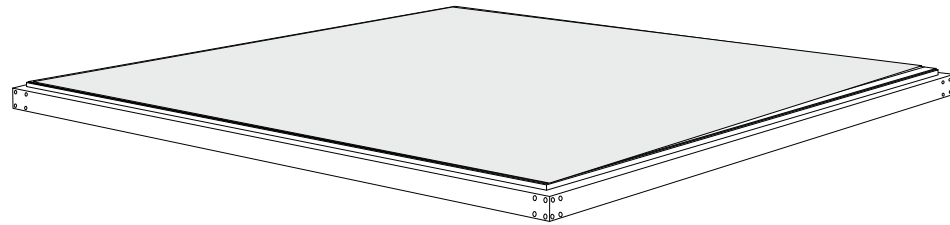


b. Offer up the door panel.

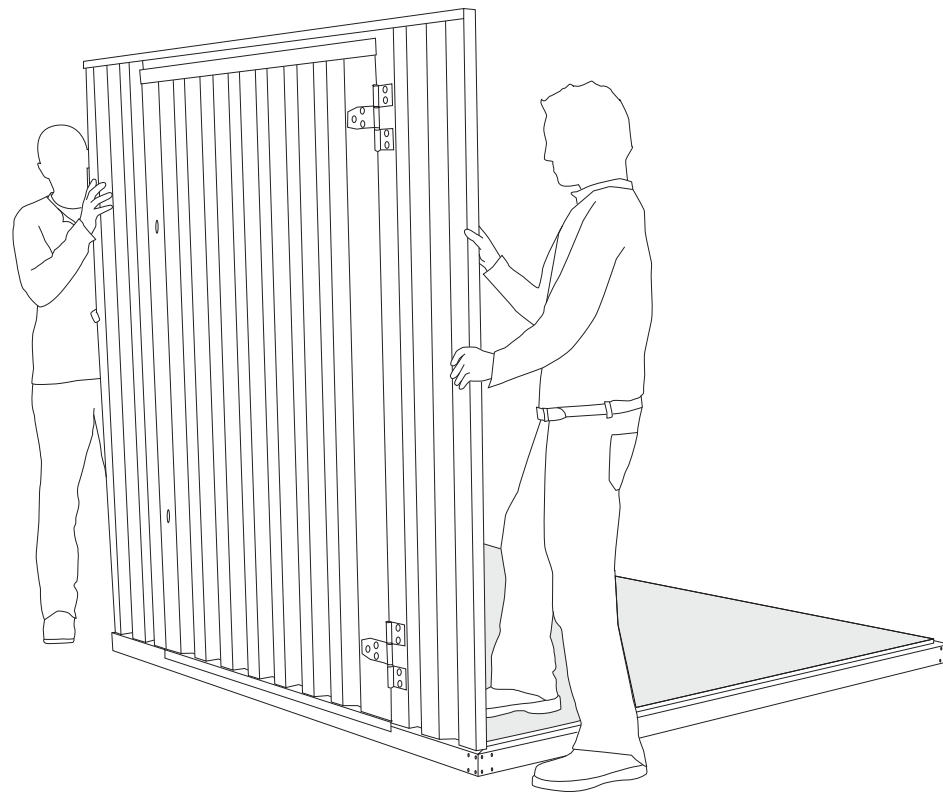

Panel Positioning Note


When positioning door and wall panels make sure that the overlapped lip edge is at the top and the flat ledge is at the bottom.

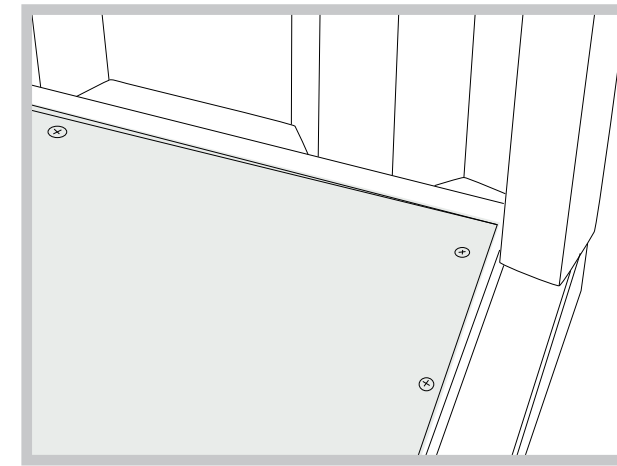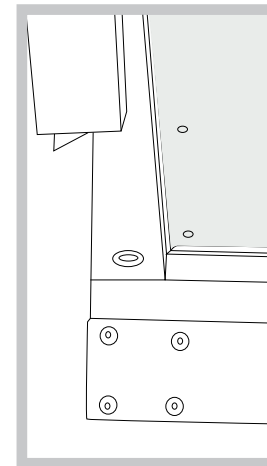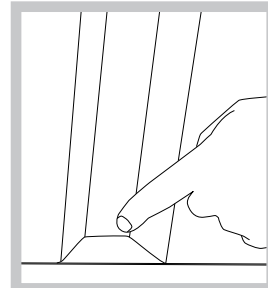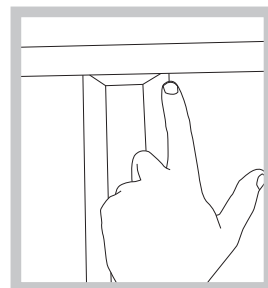

c. Butt the panel up against the chassis edge.




d. Open the door and use it as a natural prop for the door panel.

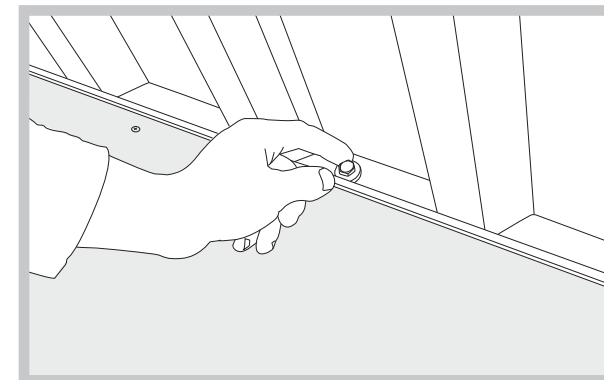


e. Insert the M8x20 bolts and M8 washers then hand tighten to the chassis.

3. Wall Fitting



a. Offer up a wall panel.

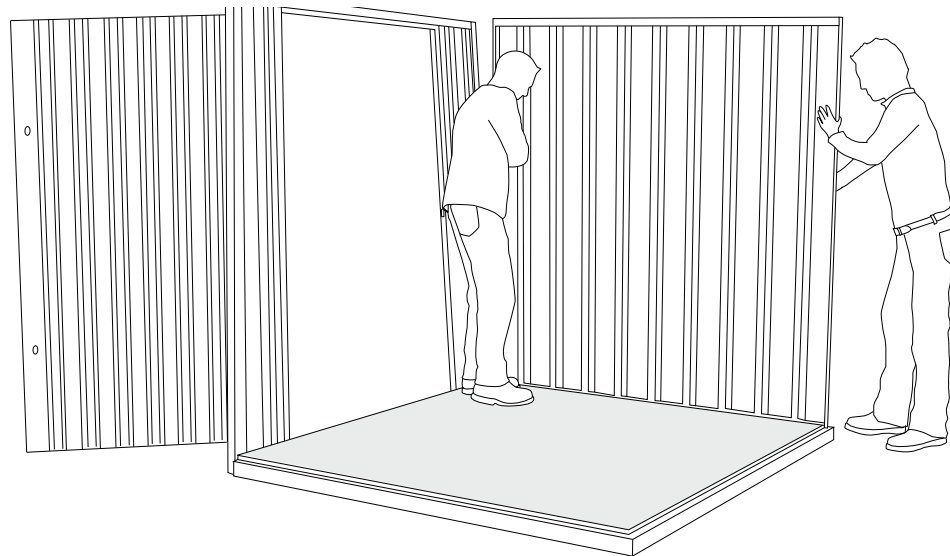

b. The wall panels should inter-lock.

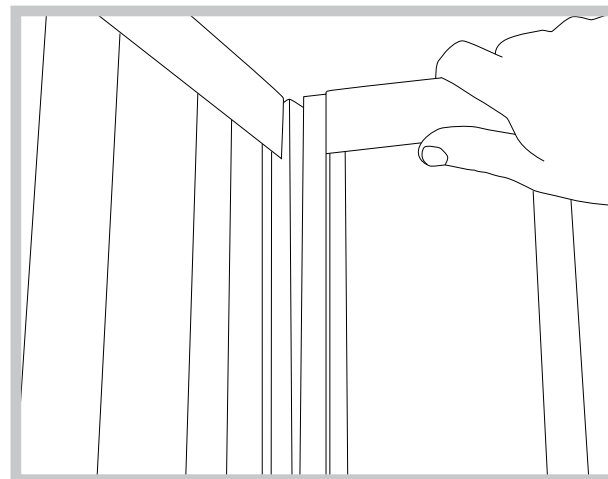


c. Squeeze the panel sides together.

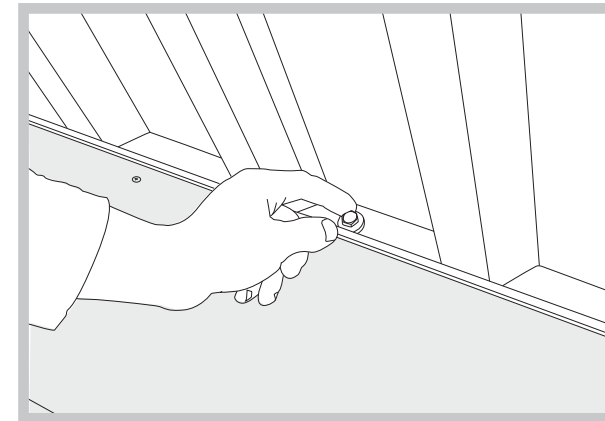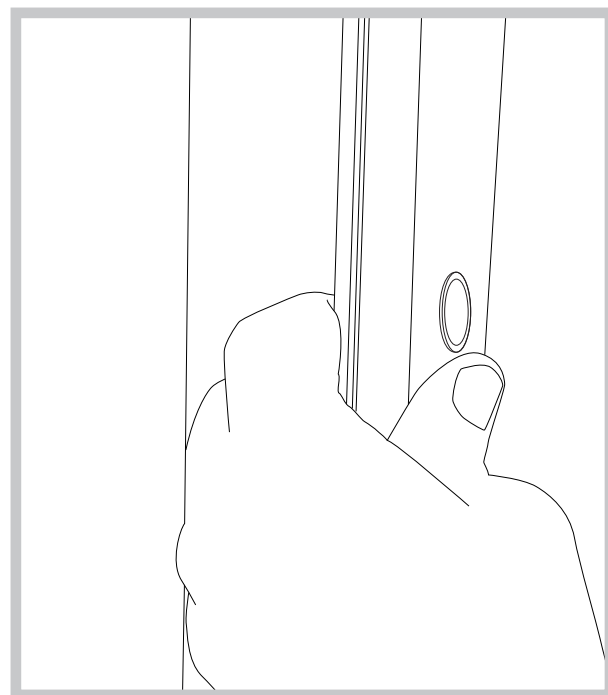

d. Insert the M8x20 bolts and M8 washers then hand tighten to the chasis.

Use M12 bolts and washers instead of M8 according to the nut type fixed on the chasis.

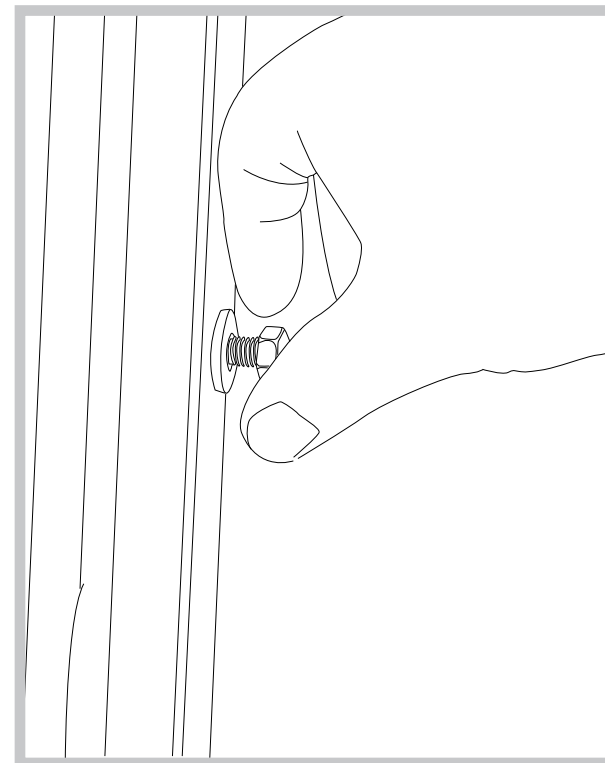


e. Insert the M8x20 bolts and M8 washers then hand tighten. If the holes are not aligned first tighten the bolts connecting the panels to the chasis with a wrench.

f. Repeat the same for the 2 remaining wall panels.


Door Note

You can adjust the self closer door catch by turning the adjustment screw as shown in the figure.

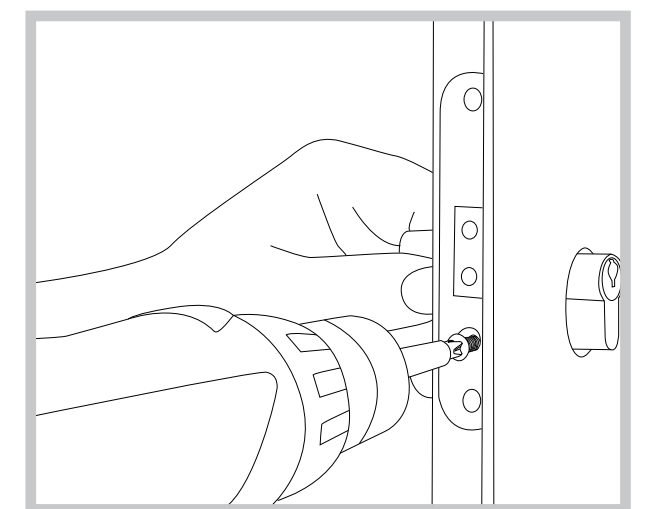


4. Roof Fitting



a. Once the walls are in place, lift the roof panel onto the unit.

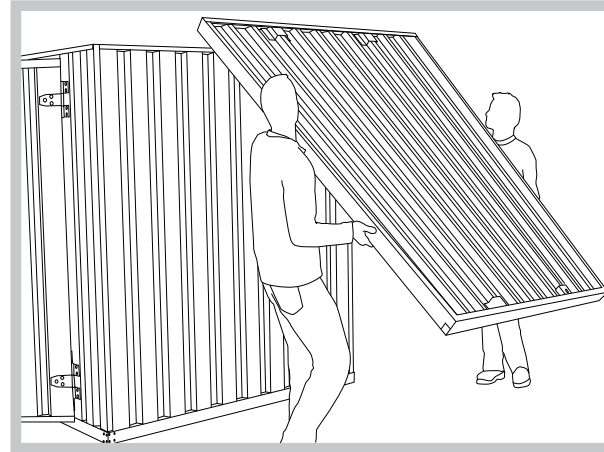

b. Slide the roof panel into position.


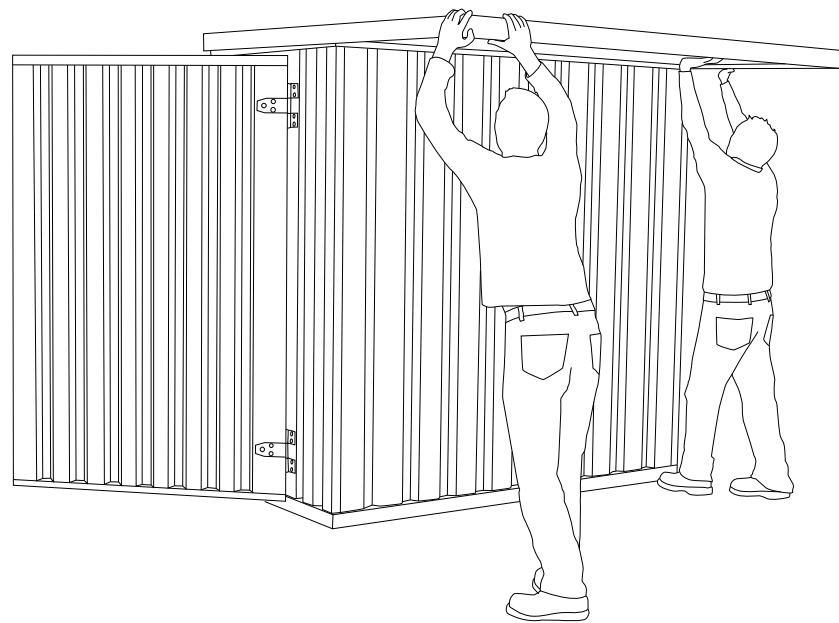


c. Once in position, pull the roof cap so that it locks into position all the way around.

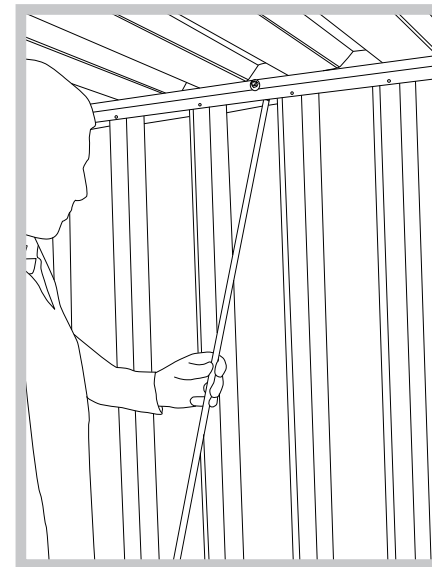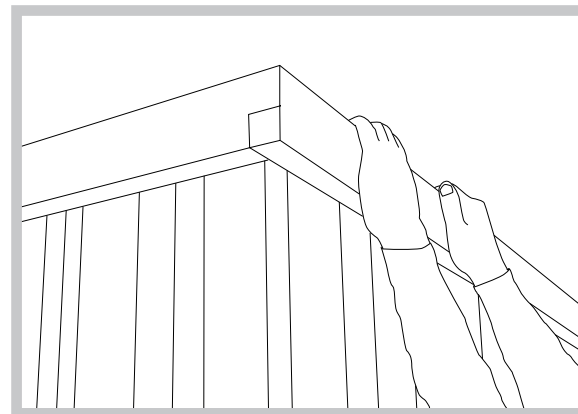


d. Inside insert the 4 lifting rods through the eyelets at the top and into the captive nuts in the chassis.


e. Screw the lifting rods into the chassis retaining nuts.

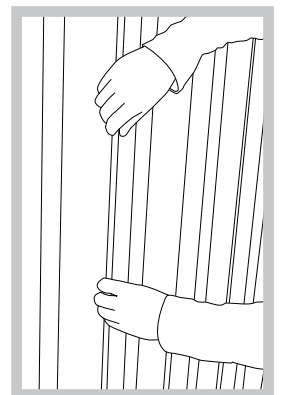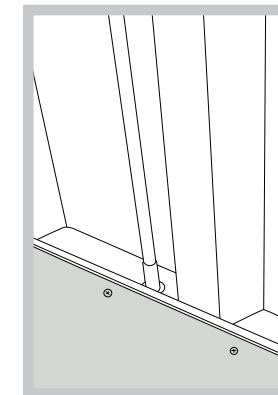

f. Outside attach the lifting eyes (with their M27 and rubber washers) to the end of the lifting rods.



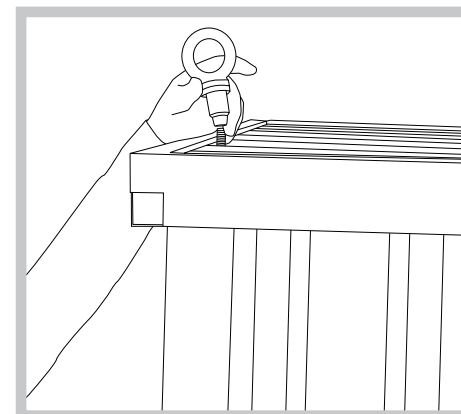


g. Inside insert the M8*20 bolts and M8 nuts for safety.

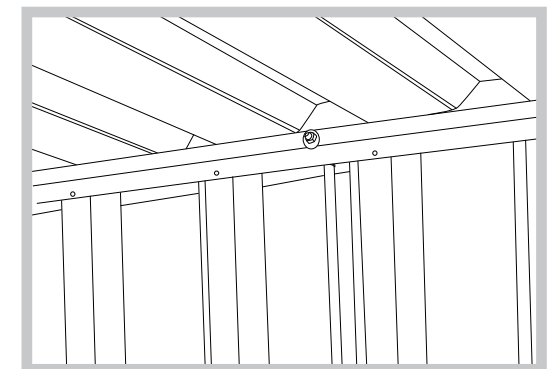


5. Door Fittings

a. Fit the 2 barrel locks

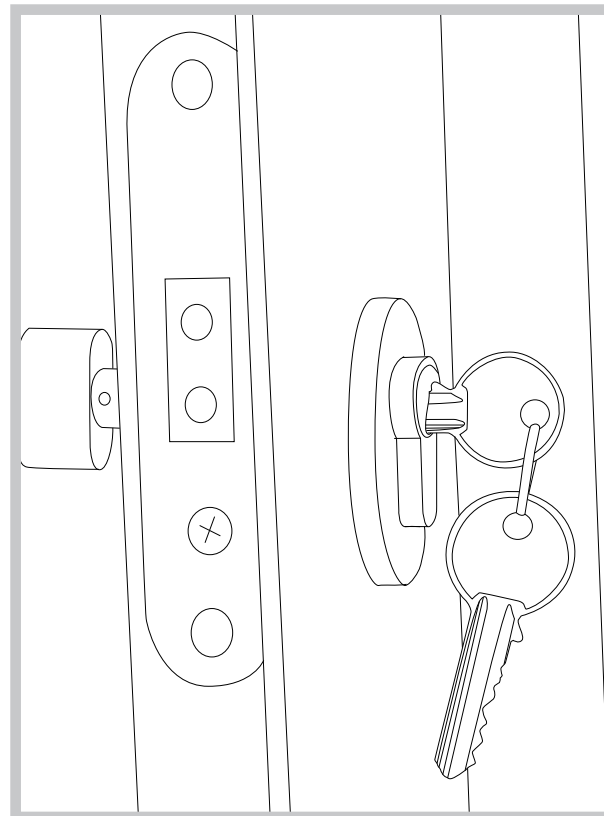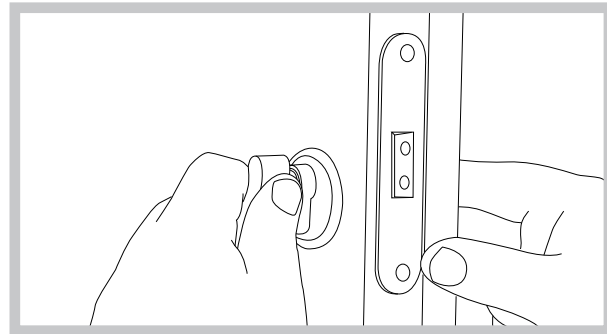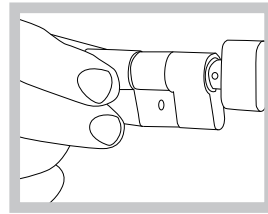


b. Fit the door handle

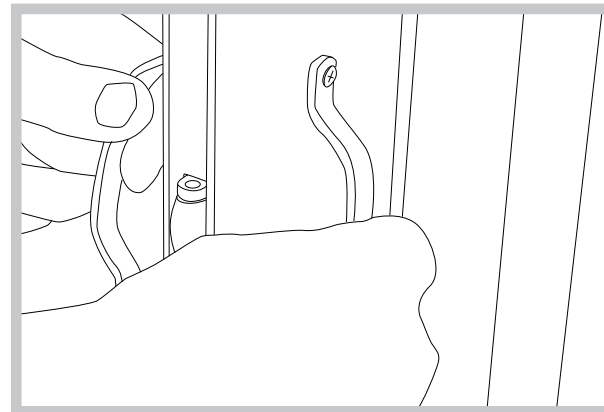

Fully tighten all nuts and bolts


6. Your Store is now ready for use

Your Store is now ready for use. We trust it will give you many years of service

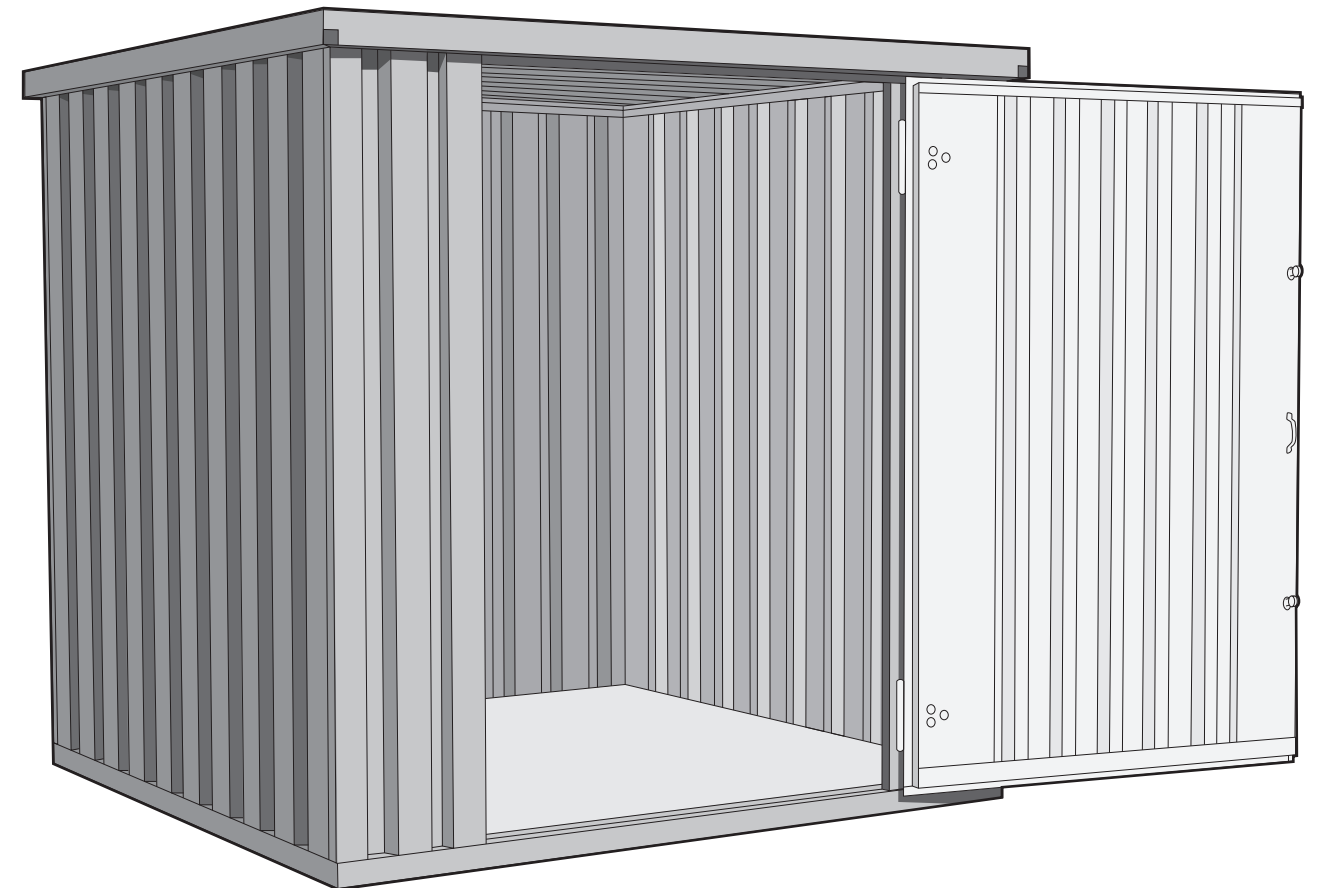


Accessories

See overleaf for some of the many Store accessories...

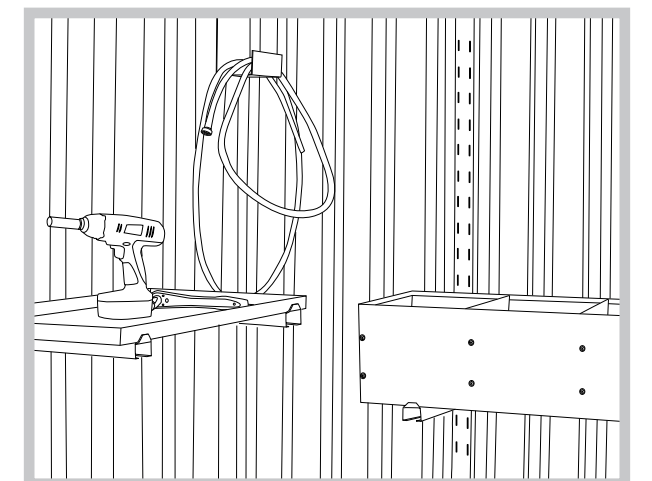


7. Accessories

1. Door Closer

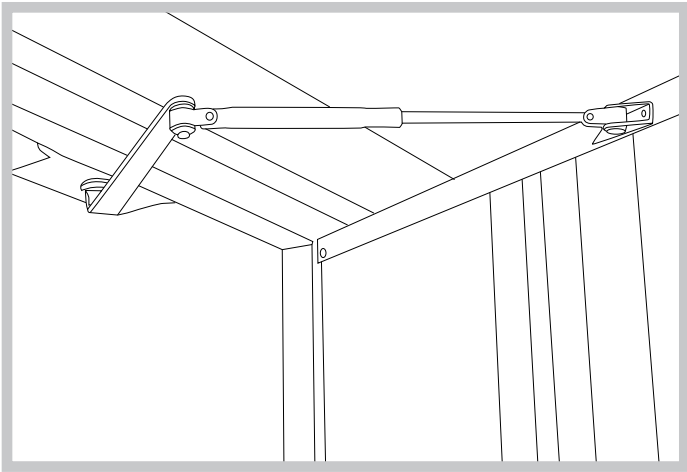


2. a. Shelf Arms
b. Uprights

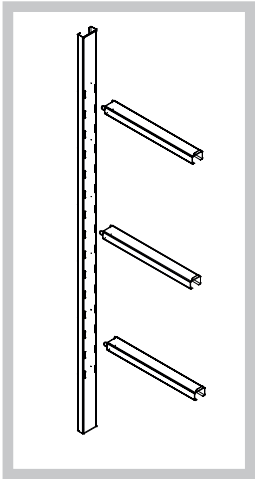


c. Shelves




3. Wire/hose hook

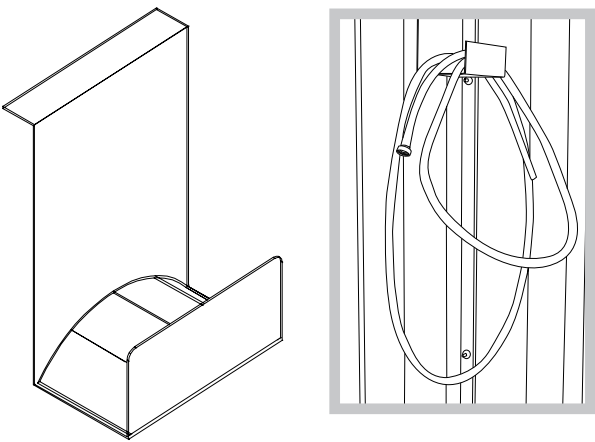


4. Locking Bar

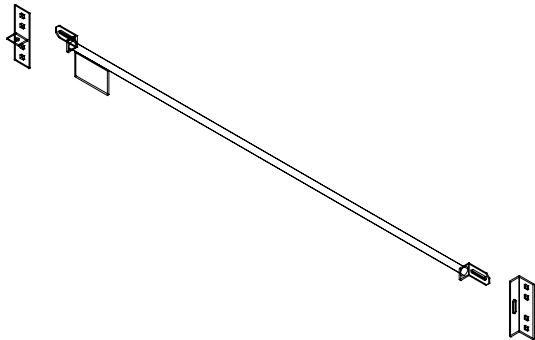


5. Tool Bin

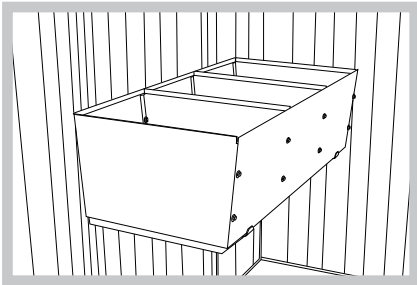


7. a. Castors

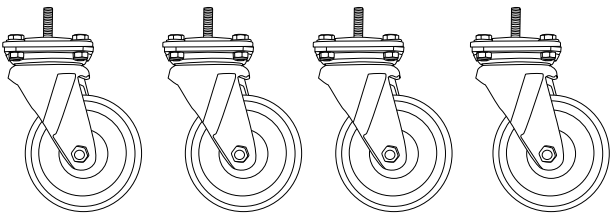


b. Fork-lift feet

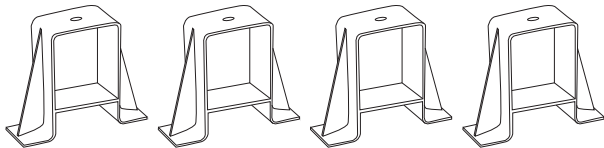


c. Self-levelling feet

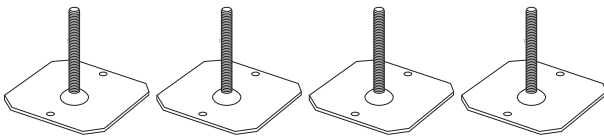

8. Linking Kit

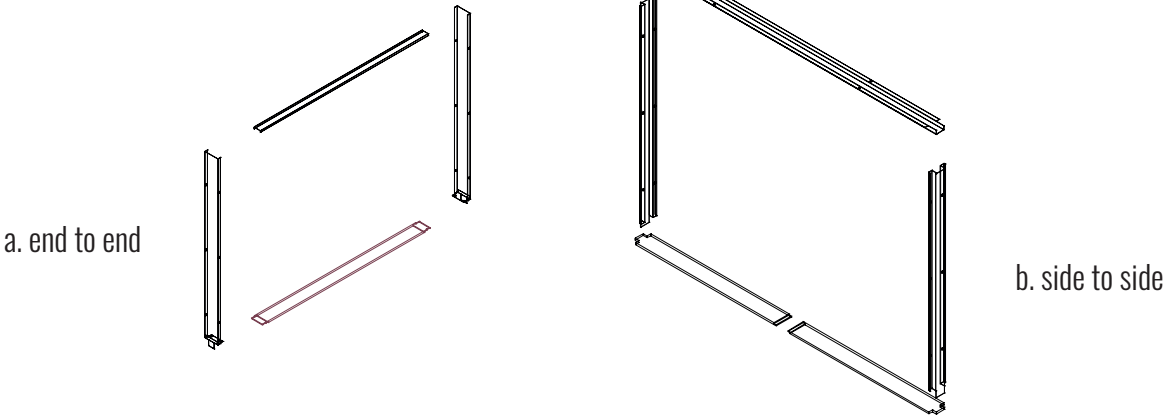

9. Plastic Plug



10. Touch up Spray

We can provide you with cans of spray of paint for touching up powder coated galvanized units.